




# ALPINE ELEVATOR

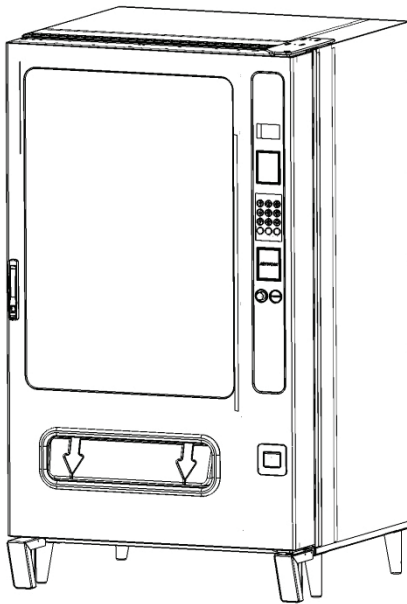

**GVC2  
PROGRAMMING  
ADDENDUM**

**MODEL  
3557**








## PROGRAMMING & TEST FUNCTIONS

Once in service mode the control functions can be accessed and used, these are the menu headings specific to the Elevator functions:-

### 4) CONFIGURATION

### 0) DIAGNOSTICS






## 4•0•0 PROGRAMMING ELEVATOR FUNCTIONALITY/ENABLING

STEP		DISPLAY
1	Press the 'Service Mode'  button on the control board	(Motor Count)
2	Press 	Configuration
4	Press 	Password: Configuration
3	Enter Password (default 2314)	Advanced Configuration
5	Press 	Elevator Enable ON * - exit 0 - edit
6	Press  to toggle the setting ON or OFF	Elevator Enable ON/OFF * - exit # - save
7	Press  to save	Elevator Enable ON/OFF * - exit # - edit
8	Press  3 times to exit	Back to sales mode

## 0•0 DIAGNOSTICS







- ① - View Elevator Controller Software Revision
- ② - Search for Shelves/Number of Trays found
- ③ - Manually Operate the Baffle Open/Close Function

### 0.0.1 - View Elevator Controller Software Revision

STEP		DISPLAY
1	Press the 'Service Mode'  button on the control board.	(Motor count)
2	Press 	Diagnostics
3	Press 	Elevator
4	Press 	Software Version * - exit
5	Press  3 times to exit	Back to sales mode

### 0.0.2 - Search for Shelves/Number of Trays found








**NOTE: The main door must be closed to perform this function**

STEP		DISPLAY
1	Press the 'Service Mode'  button on the control board.	(Motor count)
2	Press 	Diagnostics
3	Press 	Elevator
4	Press 	e.g. Found 5 Rows * - exit 1 - Start
5	Press  to start – Elevator will search for Trays	e.g. Finding 5 Rows * - exit
6	At completion	e.g. Found 5 Rows * - exit 1 - Start
6	Press  3 times to exit	Back to sales mode

### 0.0.3 - Manually Operate the Baffle Open/Close Function

**NOTE: The main door must be closed to perform this function.**

**IMPORTANT: Do not attempt to open the main door with the baffle CLOSED, this can cause severe damage**

STEP		DISPLAY
1	Press the 'Service Mode'  button on the control board.	(Motor count)
2	Press 	Diagnostics
3	Press 	Elevator
4	Press 	e.g. Baffle OPEN 1 - open 2 - close
5	Press  to CLOSE the baffle	2 – Closing (flashes)
6	At completion	Baffle CLOSED 1 - open 2 - close
7	Press  to OPEN the baffle	1 – Opening (flashes)
8	At completion	Baffle OPEN 1 - open 2 - close
9	Press  3 times to exit	Back to sales mode

**NOTES:**

*The contents of this publication are presented for informational purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. We reserve the right to modify or improve the designs or specifications of such products at any time without notice.*



VendNet™  
 165 North 10th Street  
 Waukee, Iowa 50263  
 United States of  
 America



	USA & Canada	International
Service	<b>(800) 833-4411</b>	<b>(515) 274-3641</b>
Parts	<b>(888) 259-9965</b>	
Email	<b>vendnet@vendnetusa.com</b>	
Web Site	<b>www.vendnetusa.com</b>	